




OFFICIAL TEMPLATE

USE TO DETERMINE IF THE MODEL 1000/1100 WILL FIT YOUR DOOR

INSTRUCTIONS FOR USE

1. Tear out perforated (dotted lines) section
2. See note below regarding storm doors
3. If necessary, temporarily remove storm door trim on latch side only to confirm fit. Do not bend trim.
4. Place template against door frame ignoring door gasket at this time.
5. If template fits, your door frame should accept a model 1000 or 1100 (see exterior siding note below).
6. Visit our website www.johnnylok.com for videos, instructions and FAQs.

FOR MODELS 1000 / 1100
U.S. PATENT NO. 8,510,994 B2

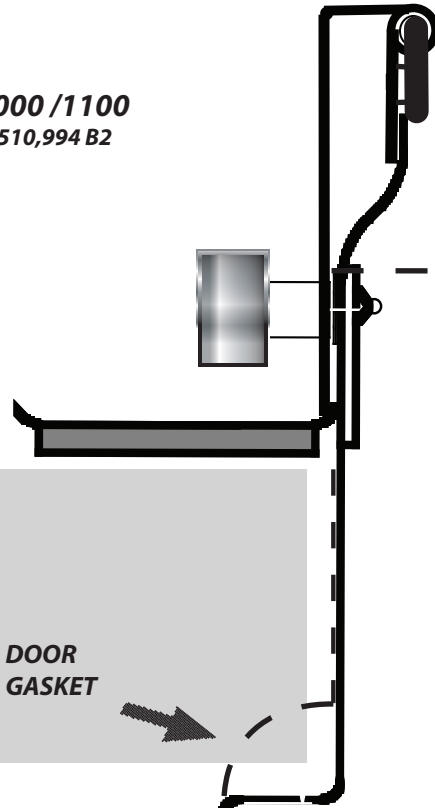

NOTE: If interior trim is thicker than 3/4 inch from wall, modification may be required.

DOOR

DOOR GASKET

CUT OUT THIS SECTION ON DOTTED LINE

Go to www.Johnnylok.com for instructions regarding latch rails and storm doors

QUESTIONS? SIMPLY E-MAIL US AT:
INFO@JOHNNYLOK.COM

Model 1100 Does Not Have This Bent Tab

CUT HERE FOR **STANDARD** SIDING INCLUDING WOOD, VINYL, ALUMINUM
USE MODEL 1000

CUT HERE FOR **MASONRY** SIDING INCLUDING BRICK, STONE, ETC.
USE MODEL 1100